



# Disclaimer

## WARRANTY

Maksiwa warrants to the original retail purchaser of a new industrial cabinet saw from an authorized Maksiwa distributor that the saw will be free from defects in material and workmanship and that the electric motor supplied with the saw will be free from defects in material and workmanship for TWO YEARS from the date of purchase.

This warranty does not apply to defects arising from misuse, abuse, negligence, accidents, normal wear-and-tear, unauthorized repair or alteration, or lack of maintenance. This warranty is void if the saw or any portion of the saw is modified without the prior written permission of Maksiwa, or if the saw is located or has been operated outside of the country where the authorized Maksiwa distributor from whom the saw was purchased resides.

Please contact Maksiwa to take advantage of this warranty. If Maksiwa determines the saw is defective in material or workmanship, and not due to misuse, abuse, negligence, accidents, normal wear-and-tear, unauthorized repair or alteration, or lack of maintenance, then Maksiwa will, at its expense, and upon proof of purchase, send replacement parts to the original retail purchaser necessary to cure the defect. Alternatively, Maksiwa will repair the saw provided it is returned to Maksiwa, shipping prepaid, with proof of purchase and within the warranty period.

Maksiwa disclaims any and all other express or implied warranties, including merchantability and fitness for a particular purpose. Maksiwa shall not be liable for death, injuries to persons or property, or incidental, consequential, contingent or special damages arising from the use of the saw.

This warranty gives you specific legal rights. You may have other rights which vary from state to state.

## SAFETY

A table saw is a dangerous tool and there are hazards inherent with using this saw. Some of these hazards are discussed below. Use common sense when operating the saw and use the saw only as instructed. You are responsible for your own safety! We at Maksiwa hope you never have an accident with your saw, and strongly encourage you to always follow safe practices and to use all the safety equipment provided with this saw.

## WARNINGS

**01** Read and understand the instruction manual and all safety warnings before operating this saw. Failure to follow instructions or heed warnings may result in electric shock, fire, serious personal injury or property damage. Save these instructions and refer to them whenever necessary.

**02** Some types of dust created by sawing, power sanding, grinding, drilling, and other construction activities also contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are lead from lead-based paints, crystalline silica from bricks, cement, and other masonry products, and arsenic and chromium from chemically treated lumber. In addition, wood dust has been listed as a known human carcinogen by the U.S. government. The risk from exposure to these chemicals and to dust varies depending on how often you do this type of work. To reduce your exposure, work in a well ventilated area and work with approved safety equipment including dust masks or respirators designed to filter out such dust and chemicals.

**03** THIS SAW MUST BE CONNECTED TO A GROUNDED WIRING SYSTEM or to a system having an equipment-grounding conductor. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. Improper connection of the equipment-grounding conductor can result in a risk of electric shock and/or malfunction. Check with a qualified electrician or service personnel if the grounding

instructions are not completely understood or if in doubt as to whether the tool is properly grounded.

- 04 Pay particular attention to instructions on reducing the risk of kickback. Kickback occurs when a work piece contacts the downstream edge of the blade as it is being cut and is propelled back towards the user at a high velocity.
- 05 Keep guards in place and in working order. Use a blade guard and spreader for every operation for which it can be used, including all through-sawing. Use a push-stick when required.
- 06 Remove adjusting keys and wrenches from the saw before turning it on.
- 07 Keep the top of the saw clean and free from clutter. Cluttered areas invite accidents.
- 08 Do not use the saw in dangerous environments. For example, do not use the saw in damp or wet locations or expose it to rain; and keep the work area well lighted.
- 09 KEEP CHILDREN AWAY from the saw. All visitors should be kept at a safe distance from the work area. Make the workshop kid-proof with padlocks, master switches, or by removing starter keys.
- 10 Do not try to force the saw to do something it was not designed to do. For example, do not try to cut wood faster than the motor can handle, and use the right blade for the job.
- 11 Wear proper apparel when using the saw. Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear a protective hair covering to contain long hair.
- 12 Always wear safety glasses when using the saw. Everyday eyeglasses are not safety glasses. Also use a face or dust mask if the cutting operation is dusty.
- 13 Keep hands out of the line of the saw blade. Never reach around or over the saw blade. Keep proper footing and balance at all times.
- 14 Maintain the saw as specified in this manual. Use only identical replacement parts when servicing the saw.
- 15 Turn the power disconnect switch to OFF before servicing the saw and when changing components or accessories such as blades, belt, brake cartridges, and the like.
- 16 Use only recommended accessories with the saw. Consult this manual for recommended accessories. The use of improper accessories may cause risk of injury to persons.
- 17 Never stand on the saw. Serious injury could occur if the saw is tipped or if the cutting tool is unintentionally contacted.
- 18 Check to make sure the saw is in proper working order before using the saw. For example, check the alignment of moving parts, look to see whether moving parts are binding or rubbing, check to see whether parts are broken, make sure accessories are properly mounted in the saw, and check any other conditions that may affect the operation of the saw. A guard or other part that is damaged should be properly repaired or replaced.
- 19 Feed work into the blade or cutter against the direction of rotation of the blade or cutter only. Feeding the work in the direction of rotation may cause the work to be thrown by the blade and could result in serious personal injury.
- 20 Never leave the saw running unattended. Wait until the blade comes to a complete stop, and then turn both the Main Power switch and the Disconnect switch to OFF when you are finished using the saw.
- 21 You must install a rip fence before using this saw. Attempting to use the saw without a rip fence could result in a serious personal injury.
- 22 Never operate the saw with the access doors open. Do not attempt to bypass or defeat the access door interlock switches.
- 23 Secure your work. Use clamps or a vise to hold work when practical. It's safer than using your hand and it frees both hands to operate the saw.

**24** Do not perform any operation freehand. Freehand means not using a fence (for rip cuts) or a miter gauge (for cross-cuts) to guide the work piece as it is being cut. Always maintain firm control over the material being cut.

---

Maksiwa International Inc. | 4100 N Powerline Rd, Suite D1 - Pompano Beach, Florida - ZIP Code: 33073

 +1 (844) 319-6594  
+1 (754) 205-6717

 [customer.service@maksiwa.com](mailto:customer.service@maksiwa.com)  [maksiwa.com](http://maksiwa.com)    [/maksiwausa](https://www.instagram.com/maksiwausa/)